

## Commands List

	Item	Description	Instruction		Example	
			Send SMS to the unit	Reply		
1	begin	Initialize the unit, all settings by user will be set blank.		begin+pw	begin ok begin123456	
2	admin	Set authorized number, only these numbers can control the unit.	On	admin+pw+space+phone number	admin ok	admin 123456 13417411616
			Off	noadmin+pw+space+phone number	noadmin ok	
3	password	Set password.		password+old pw+space+new pw	password ok password123456 666888	
4	time zone	Set GMT time zone number.		time zone+pw+space+GMT No.	time ok time zone123456 -4	
5	tsn	Set interval of sending message of geo-info.	On	t***s***n+pw	no reply	t030s005n123456 (here means send total 5 messages with interval as 30 seconds.)
			Off	notn+pw	notn ok	
6	smslink	Send one SMS to get one reply, which is certain link, you can click it to see the map		smslink123456	smslink123456	
7	smsone	Send one SMS to get only one reply with geo-info		smsone123456	no reply smsone123456	
8	monitor	Switch to the monitor mode, you will hear the voice from unit after you call it.		monitor+pw	monitor ok monitor123456	
9	tracker	Switch to the tracking mode, you will get geo-info after you call it.		tracker+pw	tracker ok tracker123456	
10	low battery	Send alarm message when the battery is low if power. (once per 30m)		no need to set up	bat:l	
11	help me	Send alarm message when the SOS button is pressed. (once per 3m)	On	press SOS for 3s	help me	alarm will be sent to authorized number on turn, until you reply with SMS "help me".
			Off	help me		

12	speed	Set a speed limit. Alarm will be sent when exceed the limit.	On	speed+pw+space+080(km/h)	speed ok	speed123456 080
			Off	nospeed+pw	nospeed ok	
13	move	Set a R500m circle, Alarm will be sent when exceed the circle.	On	move+password	move ok	move123456
			Off	nomove+password	nomove ok	
14	stockade	Set a geo-fence (via coordinate of two diagonal points). Alarm will be sent when exceed the limit.	On	stockade+pw+space+long,lat;long,lat	stockade ok	stockade123456 22.567185E,114.051248N; 22.555666E, 114.777888N
			Off	nostockade+pw	nostockade ok	
15	hide number	After this, all number can call the units, and the geo-info only sent to the first authorized number	On	hide number+pw	hide number ok	hide number123456
			Off	nohide number+pw	nohide number ok	
16	APN	Set APN ( old one will be replaced when a new one is set )		apn+pw+apn content	apn ok	apn123456 internet
17	ANP User	Set APN Username		apnuser+pw+sapce+content		apnuser123456 internet
18	ANP Pw	Set APN password		apnpasswd+pw+space+content		apnpasswd123456 internet
19	home	Set website of the server.	On	home+pw+space+website	home ok	home123456 www.xexun.com
			Off	home+pw+space+space	home ok	
20	adminip	Set IP and Port of the server	On	adminip+pw+space+ip+space+port	adminip ok	adminip123456 218.145.45.33 9001
			Off	noadminip+pw+space+ip+space+port	noadminip ok	
21	adminsms	Set a SMS center, then all SMS will be sent to this number.	On	adminsms+pw+space+phone number	adminsms ok	adminsms123456 13417411616
			Off	noadminsms+pw+space+phone number	noadminsms ok	
22	imei	To see the IMEI number of the unit. (sth. like ID of the unit)		imei+password		imei123456
23	fortify	Switch to the fortified mode. (vehicle tracker-TK101 only)		fortify+pw	fortify ok	fortify123456
24	fortified	To see if the unit is under fortified mode. (vehicle tracker-TK101only)		fortified+pw	fortify / no fortify	fortified123456
25	battery	Under fortified mode, alarm will be sent when power is cut off. (vehicle tracker only)		No need to set up	battery! geo-info	