

EF fast index

Function description:

EF "Efin" is integrated with time recorder, PWD door controller, single-door controller, reader with Chinese character display and double door controller.

- One built-in card reader, two sets of W26 interface, two sets of sensor input, two sets of open button input, two sets of relay output, one set of bell port and one set of RS485 communication interface.
- Chinese-English Menu port with backlight; display the owner's name and work number, send public short message and personal short message; the alarm supporting working day setting, set equipment parameter by keyboard, off-line operation, support 2000 card holders, store 25000 pieces of card reading information and alarm event and network with 255 machines.
- Flexible application can re-define the IO interface. For example, W26 port will be defined as W26 standard output or input, the relay can be defined as door controller, bell or alarm output, the sensor can be defined as fire ALMsignal.
- Professional door controller functions: 32 time periods/64 time sets/16 application groups/8 types of holidays/validity period for card; when the hard is off-line, there are two layers of A.P.B protection; Only PIN, only card and card & PIN are available; soft control of any door, various alarm incidents functions: open time-out, close time-out, intrude alarm, force alarm, burglar alarm and fire ALM etc.

Menu_Main	
---Clock	
---Set time	
---Adj time	
---Adj not	
---Adj fast	
---Adj slow	
---Alarm clock	
---CLK 01->	
---Enable	
---Alarm	
---Delay	
---WeekSet <input checked="" type="checkbox"/> Sunday <input checked="" type="checkbox"/> Monday... <input checked="" type="checkbox"/> Saturday	
---...	
---CLK 16-> (Ditto)	
---Card	
---Add card	
---Update card	
---Del card	
---System	
---Model ID	
---Light mode--- <input type="checkbox"/> NC. <input type="checkbox"/> NO. <input type="checkbox"/> AUTO. <input type="checkbox"/> SetTime	
---Beep hint--- <input checked="" type="checkbox"/> Keys. <input checked="" type="checkbox"/> Clock. <input checked="" type="checkbox"/> Hints,	
---Baud rate--- <input type="checkbox"/> 2400bps. <input type="checkbox"/> 4800bps. <input type="checkbox"/> 9600bps. <input type="checkbox"/> 19200bps	
---Rec. option--- <input checked="" type="checkbox"/> In rec. <input checked="" type="checkbox"/> Out rec. <input checked="" type="checkbox"/> Events. <input checked="" type="checkbox"/> Cycle.	
---Sameness. <input checked="" type="checkbox"/> Tol. alarm. <input type="checkbox"/> 5 Digit	
---Menu PWD	
---Sys info	
---Clear...	
---Updata...	
---Door	
---Door1	
---Authority	
---Timer---(0-31)	
---TimeZone---(0-63)	
---Holiday	
---APPSet---(0-15)	
---Control mode--- <input type="checkbox"/> In & Out. <input type="checkbox"/> Only in. <input type="checkbox"/> Any out. <input type="checkbox"/> A.P.B.	
---Entry type--- <input type="checkbox"/> Only card. <input type="checkbox"/> Only PIN. <input type="checkbox"/> Card & PIN	
---Sensor type--- <input type="checkbox"/> Sensor NO. <input type="checkbox"/> Sensor NC. <input type="checkbox"/> Fire NO. <input type="checkbox"/> Fire NC. <input type="checkbox"/> NULL	
---Button type--- <input type="checkbox"/> NO. <input type="checkbox"/> ONC. <input type="checkbox"/> NULL	
---OpenTime	
---CloseTime	
---First NO--- <input type="checkbox"/> ON. <input type="checkbox"/> OFF	
---Duess PIN	
---Access PIN	
---Door2	
---(Ditto)	
---Door1->2	
---Door2->1	
---IO port	
---Relay 1--- <input type="checkbox"/> Lock 1. <input type="checkbox"/> Lock 2. <input type="checkbox"/> Bell. <input type="checkbox"/> Alarm. <input type="checkbox"/> NULL	
---Relay 2--- <input type="checkbox"/> Lock 1. <input type="checkbox"/> Lock 2. <input type="checkbox"/> Bell. <input type="checkbox"/> Alarm. <input type="checkbox"/> NULL	
---W26 Port1--- <input type="checkbox"/> In 1. <input type="checkbox"/> Out 1. <input type="checkbox"/> In 2. <input type="checkbox"/> Out 2. <input type="checkbox"/> W26 out. <input type="checkbox"/> NULL	
---W26 Port2--- <input type="checkbox"/> In 1. <input type="checkbox"/> Out 1. <input type="checkbox"/> In 2. <input type="checkbox"/> Out 2. <input type="checkbox"/> W26 out. <input type="checkbox"/> NULL	
---Self Reader--- <input type="checkbox"/> In 1. <input type="checkbox"/> Out 1. <input type="checkbox"/> In 2. <input type="checkbox"/> Out 2. <input type="checkbox"/> NULL	
---Language--- <input type="checkbox"/> Chinese. <input type="checkbox"/> English	

Technical parameters

Data saving	Ten years (after power failure)
Off-line capacity	25000 pieces (adjustable)
Card control	2500 pieces (adjustable)
Card type	EM card (MIFARE is optional)
Working voltage	8~25VDC
Power consumption	<3W
Induction distance	6~15cm
Reading speed	0.15 秒 0.15 second
Communication mode	RS485
Networking capacity	255 台 255 sets
Working temperature	-20℃~70℃
Working humidity	20%~90%
Storage temperature	-25℃~85℃
LCD display	122×32DOTS
Dimension	L120×W88×H 18mm
Weight	160g

Keyboard operation description:

menu operation guide:

Go menu: press <'> and <#> (<'> first, then <#> soon after) at the initial state to enter into the menu state (press valid PWD if it is set password). If you don't press the button within 3 minutes, the system will automatically escape from the menu and restore the initial interface. When the system is in the menu state, it will give no response to the door controller and RS485 communication.

Menu browse: the menu is in tree structure. In some submenu, <7> and <9> are used to choose the items up and down. The chosen item will be in white display. Press <#> key to fix the item setting, press <'> to cancel the item setting and return to the high-authority menu.

Multiple choice and single choice: <'> key is to review upward, <9> key is to review downward; <#> key is to choose multiple choices or single choice; <'> key is to escape the multiple choice or single choice and save the choice result.

Operation guide for PWD entry:

Press <#> at the initial state and the screen displays the prompt to enter the password. Enter the PWD (from <0> to <9>) (Access PIN or Duess PIN), and press <#> key to confirm.

PWD modification: read card and press the valid password, then press <'> and <#>, stamp card again at the sight of the prompt quickly. Enter the new PWD two times. The personal PIN modification is successful. (Default PWD is: 888888)

1、Display icon index

Icon	Meaning
↶	Current option
↓	There is some information following, press < 9 > to review.
↑	There is some information above, press < 7 > to review.
☐	There is no chosen item in the check box.
<input checked="" type="checkbox"/>	There is chosen item in the check box.
○	There is no chosen item in the radio button.
<input checked="" type="radio"/>	There is chosen item in the radio button.


2、keyboard function index

Key	Function
< 0 > < 1 > < 2 > < 3 > < 4 > < 5 > < 6 > < 8 >	Number input
< 7 >	Number 7 input Up
< 9 >	Number 9 input Down
<'>	Cancel the operation Return to the high-authority menu Escape multiple choice or single choice and save the choice.
<#>	Confirm the operation Enter into the submenu Choose multiple choices or single choice.

Authority and card management

Setting steps

- Set time period list-> set SetTimelist-> set holidays-> set application groups 00-15
- Card management-> add card or modify card, set the validity period of the card and.

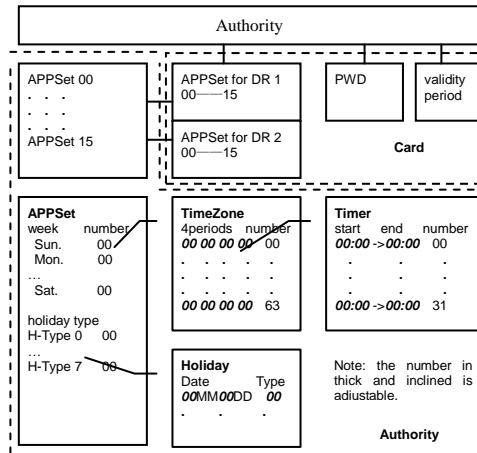

Note: the following setting is based on the default setting.

- PWD door controller
 - Door->Door1-> Entry type (set as **Only PIN**)
->Door1 (set as **Duess PIN, Access PIN and OpenTime** respectively)
 - IO port ->Relay 1 (set as **Lock 1**)
->Self reader (set as **In1**)

- Standard wiegand chuck
 - IO port -> W26 port1(2) (set as **W26 out**)

After setting and reading card, the port JP2(3) outputs the "card" of W26 standard format. What's more, the key is compatible with the chuck of Motorola and HID. The key output codes are shown as follow:

Key	0	1	2	3	4	5	6	7	8	9	*	#
Code output (binary)	0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011

See the order for signal in the right picture.

- Control two doors and press PWD after reading card (connecting w26 reading head with two passwords)

- IO port -> W26 port1 (set as **In 1**)
->W26 port2 (set as **In 2**)
->Relay1 (set as **Lock 1**)
->Relay2 (set as **Lock 2**)
- Door ->Door1-> Entry type (set as **Card & PIN**)

- The one who enters by reading card is permitted be out by reading card and the alarm for going to and off work is needed.

- IO port ->W26 port1 (set as **In 1**)
->W26 port2 (set as **Out 1**)
->Relay1 (set as **Lock 1**)
->Relay2 (set as **Bell**)
- Door->Door1->Control mode(set as **A.P.B**)
- Clock -> Alarm clock (set as you desire)

- There is one entry and one exit in one parking lot. The card reading is necessary when entering and going out the lot. But the vehicle that isn't registered by card reading in the entry is forbidden to park in the lot.

- IO port -> W26 port1 (set as **In 1**)
->W26 port2 (set as **In 2**)
->Relay1 (set as **Lock 1**)
->Relay2 (set as **Lock 2**)
- Door->Door1->Control mode(set as **A.P.B**)
- Door->Door2->Control mode(set as **A.P.B**)

APPSet case

case 1
pass for 24 hours


APPSet	TimeZone	Timer
all set as 00	00 00 00 00	00:00->23:59 00

case 2
Mon~Friday: 8:00---12:00, 14:00---17:00 and 20:00---23:30 are the entrance time period.
Saturday: 8:00---12:00 entrance time
Sunand holiday (such as the National Day): no entrance for whole day


APPSet	TimeZone	Timer
Sun 00	00 00 00 00	00:00->00:00 00
Mon 01	01 02 03 00	08:00->12:00 01
Tues 01	01 00 00 00	14:00->17:00 02
Wed 01		20:00->23:30 03
Thur 01		
Fri 01		
Sat 02		
H-Type 0 00	Holiday Date Type 10MM01DD 00	

distribute corresponding APPto the two doors

Examples for common use setting:

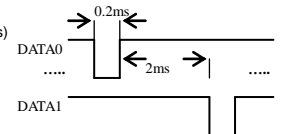

EF connection description

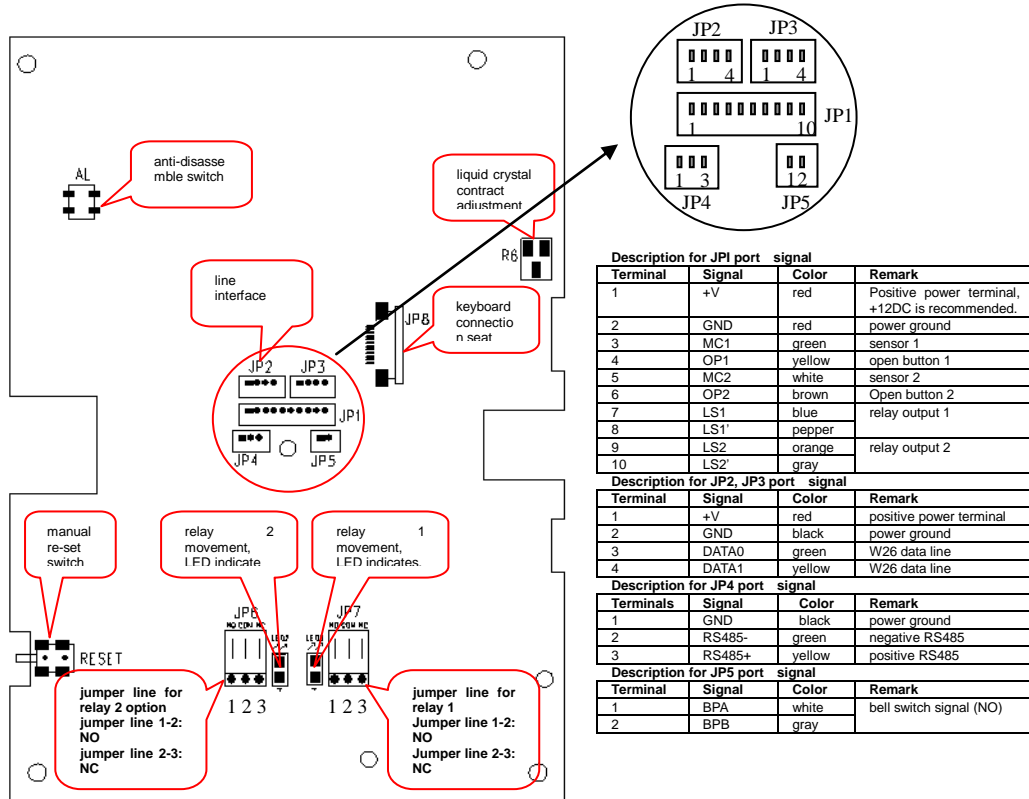

Description for JP1 port signal

Terminal	Signal	Color	Remark
1	+V	red	Positive power terminal, +12DC is recommended.
2	GND	red	power ground
3	MC1	green	sensor 1
4	OP1	yellow	open button 1
5	MC2	white	sensor 2
6	OP2	brown	Open button 2
7	LS1	blue	relay output 1
8	LS1'	pepper	
9	LS2	orange	relay output 2
10	LS2'	gray	

Description for JP2, JP3 port signal

Terminal	Signal	Color	Remark
1	+V	red	positive power terminal
2	GND	black	power ground
3	DATA0	green	negative RS485
4	DATA1	yellow	positive RS485

Description for JP4 port signal

Terminals	Signal	Color	Remark
1	GND	black	power ground
2	RS485-	green	negative RS485
3	RS485+	yellow	positive RS485

Description for JP5 port signal

Terminal	Signal	Color	Remark
1	BPA	white	bell switch signal (NO)
2	BPB	gray	

JP5 is bell interface: BPA and BPB is in open circuit. When pressing the round bell in the low left corner of EF panel, the BPA and BPB is circulating. Then BPA and BPB can connect with radio or wireless bell. JP4 is RS485 communication interface: the computer can control many EF (255 sets at most) by RS485 converter. Therefore, It is necessary to set a unique machine number for the EF in the network.

JP2, JP3 are the W26 interfaces: the port is a multi-functional port and can be W26 input or W26 output. When set as input, it can connect with standard W26 card reader (support read head with keyboard). When set as output, it can be used by the standard W26 card reader for other purposes. The specific menu setting: IO port -> W26 port1(2)-> W26 out

System connection picture

Note: The power terminals (+V) of JP2 and JP3 are the same as that of JP1. When the terminal supplies power to the exterior chuck, the +V voltage should not be over the rated working voltage of the exterior chuck. In this case, it is necessary to supply power separately and then connect the ground lines of the two powers.

JP1 is the main interface: including power, open button, sensor and relay output. Among them, sensor and relay output is all-purpose interface. The sensor can set as fire ALMlink, in another word, the port receives the fire ALMsignal, EF controller will open all doors of its controller doors. The relay can be set as lock control output, alarm output and alarm output. The NC and close of relay are optional of Jumper cable JP6 and JP7. See the picture above.


Name and work number of card holder; issue of short message and change of title should network with computer to manage it by EF applied software.

Hardware update


EF support hardware update on-line.

1. EF communication port connects with computer through RS232/RS485 converter.
2. When EF in the update standby state, the menu operation is shown as follow: system -> software update
3. Install "JS Updata tool for hardware" in the computer. Operate JS Updata.exe, communication port should choose correct interface, the baud rate is 19200, the updata file should be the xxxxx.updata file provided by the manufacturer. When the updata starts, progress bar indicates the course of updata. Please do not interrupt the course. After the updata, terminal computer will reboot.

System connection figure

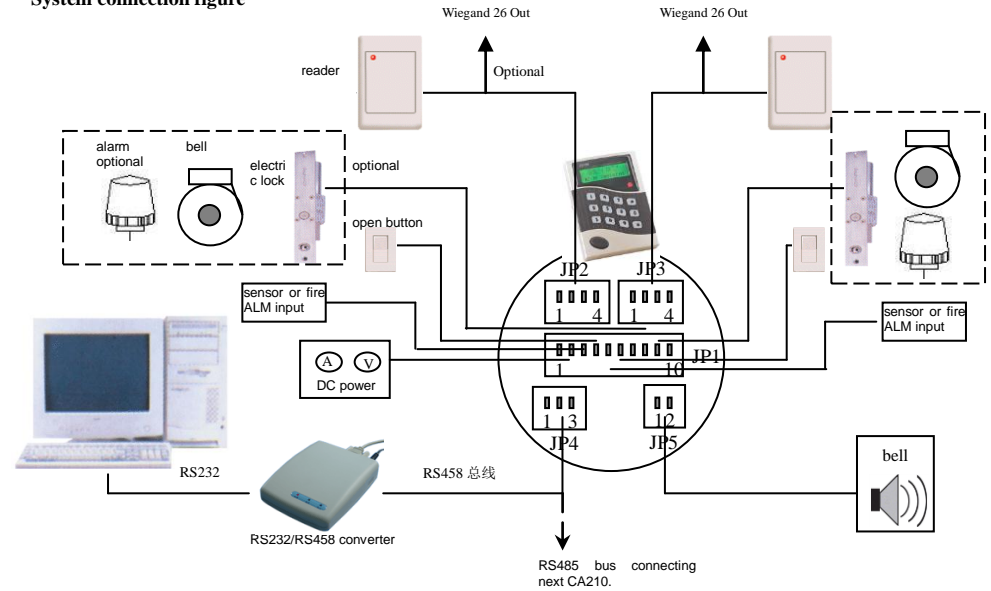

Example for connection picture

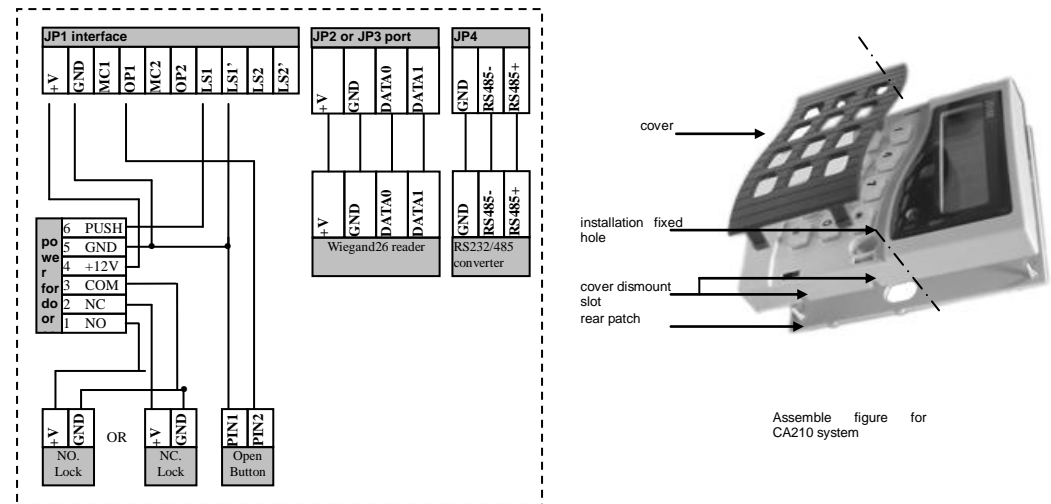

Assemble figure for CA210 system